



— Quality Sealant Applicators —

INSTRUCTIONS:

Air Assist Spray System

DISTRIBUTED BY:
COX NORTH AMERICA, INC.
8181 COLEMAN ROAD
HASLETT MI 48840

800-822-8114

517-339-3330

FAX: 517-339-3806

www.cox-applicators.com

e-mail: service@cox-applicators.com

COX Spray System Attachment to Connect to Applicator Only

1. Screw the tee to the air handle of your applicator, Teflon tape is recommended for the threads on the air handle.
2. Attach your quick connect fitting (supplied with your pneumatic applicator) to the other end of the tee.
3. Fasten the plastic quick connect fitting to the spray nozzle.
4. Move the slide valve in the direction of the arrow for full airflow (on) and the opposite direction of the arrow to stop airflow (off).
5. Turn the speed control dial to adjust pressure up or down.
6. For proper material flow, the trigger on the applicator must be pulled.

(Contact your cartridge/static mixer distributor for correct spray nozzle for your application)

COX Air Assist Spray System is manufactured for use with COX Dual Pneumatic Applicators.

Limited warranty against manufactured defects.

For all service, parts and warranty repairs call **800-822-8114**